


Avan Deluxe Awning Erection Instructions

"experience is what you need"

1. Check for correct poles
 - a. one double ended spreader (with two adjuster thumbscrews)
 - b. three upright poles (with threaded spigots)
 - c. two standard roof rails (hook one end and hole the other)
 - d. one spring loaded pole (hook one end and spigot other end)
2. erect camper as normal then slide awning into track. Use pull rope thrown over roof if needed .
3. hook a side roof rail (c) to camper and slip over an upright pole (b). Slip one end of double spreader (a) over the same upright, slip corner eyelet of roof over upright and fix with wingnut onto threaded spigot. Adjust roof rail © to tighten.
4. repeat with the other side of roof. Add roof rail, add other end of double spreader, add corner eyelet and fasten with wingnut. Tighten roof rail and now tighten double spreader.
5. add centre upright by slipping into centre eyelet and add wingnut. (make sure that hole near top of pole is facing camper)
6. hook centre roof rail (d) onto top centre bracket on camper, insert inner pole while sliding spigot into hole near top of centre upright pole. (may need small step to reach
7. add walls to roof and slide end walls into track on camper. Make sure that walls are correctly aligned to camper and peg to ground.
8. adjust upright poles to tighten walls and then check all other poles are tight.
9. add supplied guy ropes if weather dictates.
10. add longer door hook on Cruiseline and Aliner models.

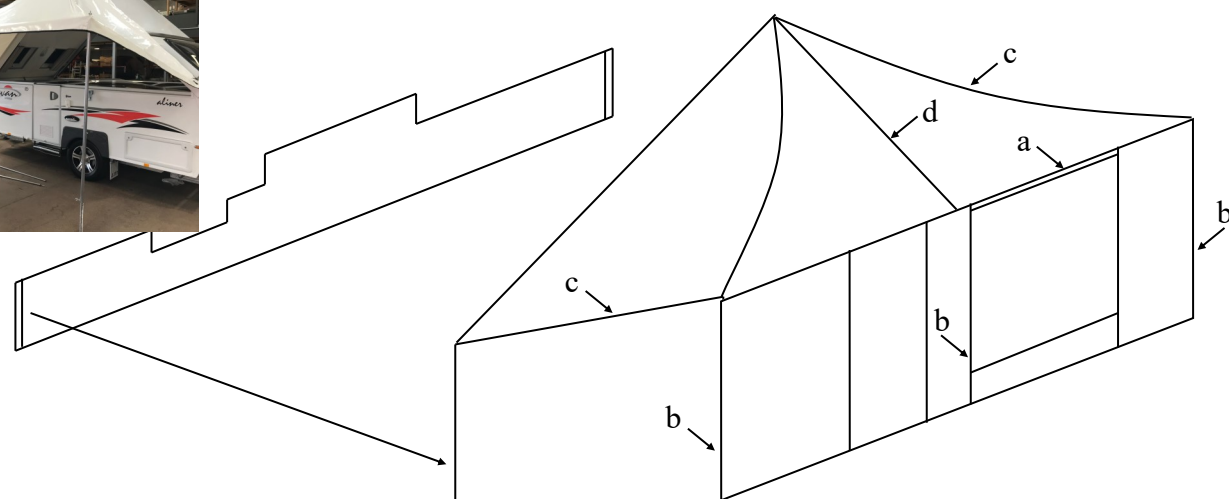

AVAN ANNEXES AND AWNINGS

Introducing the 2020 Avan Annexe and Awning Range



Also Suppliers of
BAG AWNINGS
BAG AWNING WALLS
FULL ANNEXES
AWNINGS

SUNBLOCK WALLS
PRIVACY SCREENS
ROLL OUT AWNING REPAIRS
NEW ROLL OUT AWNINGS

Available from :



The 2020 new style Avan Annexe

It looks great and gives you so much more room. Wall mounting means that not only is it so much easier to put up but you can erect and dismantle without lowering the roof of the camper.

- White PVC roof with fully welded joins. (white reflects heat for cooler living)
- Canvas walls available in Basic and Deluxe configurations (Australian made canvas)
- Models available for all current Avan Campers (can fit most older campers too)
- Plenty of full headroom interior space



SUGGESTED LAYOUTS

ALL AWNINGS COME WITH TRACKS, BRACKETS, SCREWS AND MOUNTING INSTRUCTIONS

BASIC AWNING \$795

3 POLES & 5 GUY ROPES ONLY
NO FIXINGS FOR WALLS

DELUXE AWNING \$995

FULLY FRAMED - FREE STANDING
VELCRO FIXINGS FOR WALLS




DELUXE AWNING and WALL COMBINATIONS

BASIC WALLS \$1455 + \$995

- ADD \$120 INSTALLATION IF NEEDED
- PLUS DELIVERY WHERE APPLICABLE

PRICE INCLUDES

- NEW STYLE AWNING
- 1 STANDARD DOOR
- 1 SCENIC WINDOW 6 wide
- DRAUGHT SKIRT

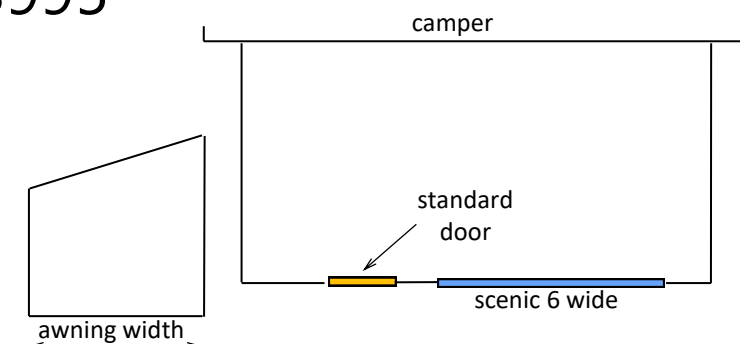


DELUXE WALLS \$2000 + \$995

- ADD \$120 INSTALLATION IF NEEDED
- PLUS DELIVERY WHERE APPLICABLE

PRICE INCLUDES

- NEW STYLE AWNING
- 1 STANDARD DOOR
- 3 SCENIC WINDOWS 6 wide
- DRAUGHT SKIRT

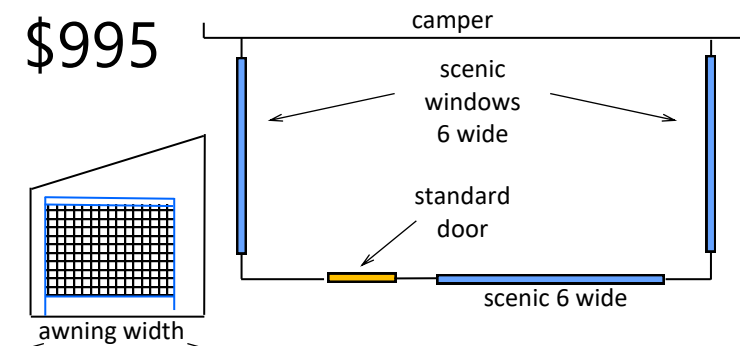

		LIGHT GREY/RED
		LIGHT GREY/DARK GREEN
		LIGHT GREY/ORANGE
		LIGHTGREY/SPRINGTIME GREEN
		LIGHT GREY/GREY



Cruiserliner



A liner



Sportliner